


Lamborghini

KKLB-021

Licensed Battery-Powered Ride-on

RIDE ON CAR

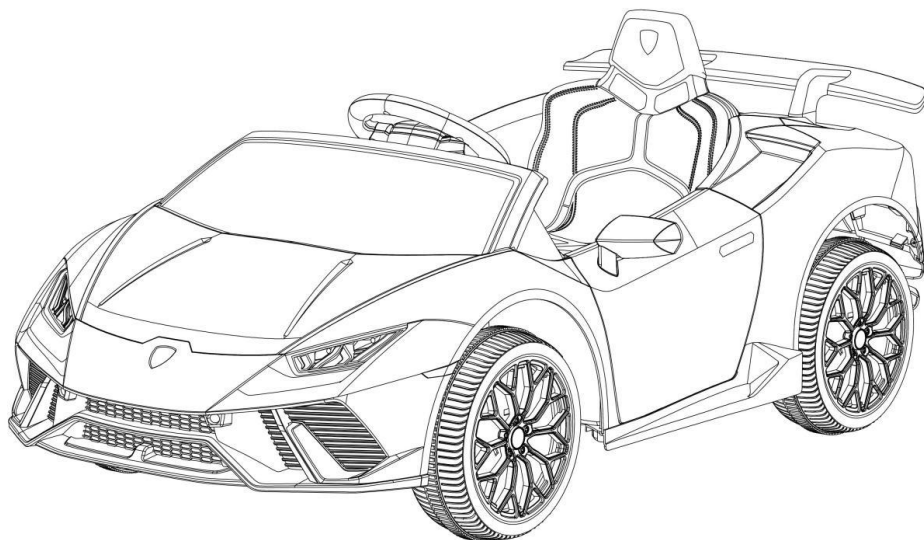

OWNER'S MANUAL

with Assembly Instructions

Read and understand this entire manual before using!

Please keep this manual for future reference as it contains important information.

Before first time use, charge the battery for at least 8-12 hours.

N0:0

About New Vehicle 1

Thank you for purchasing Lamborghini Licensed Battery-Powered Ride-on produced by "Pinghu Little Sun Childs Vehicles Co.,Ltd".

It's important to read the instruction book before using. It can tell you how to use and install the toy and help avoid danger. Please keep the safety rules in mind and instruct your child.

Specification

Suitable age	37-95months	Load capacity	30KG
Speed	3-5km/h		
Charge time	8-12 hours		
Size of car	118.5×63×48cm		

Parts List 2

Number	Name	quantity		note
		Double drive		
1	Steering wheel	1		
2	Windshield	1		
3	Seat	1		
4	Tailstock	1		
5	Mirror	2		
6	Wheel	4		
7	Wheel cap	4		

A	Ø10 metal gasket	6-8		
B	M10 nut	4		Install on axle
C	M5 screw	1		Install on Steering wheel
D	M5 nut	1		Install on Steering wheel

※assembly tools required




Screwdriver
(not included)



wrench
(included)

Parts Diagram 3

NOTE: Some parts shown are assembled on both sides of vehicle

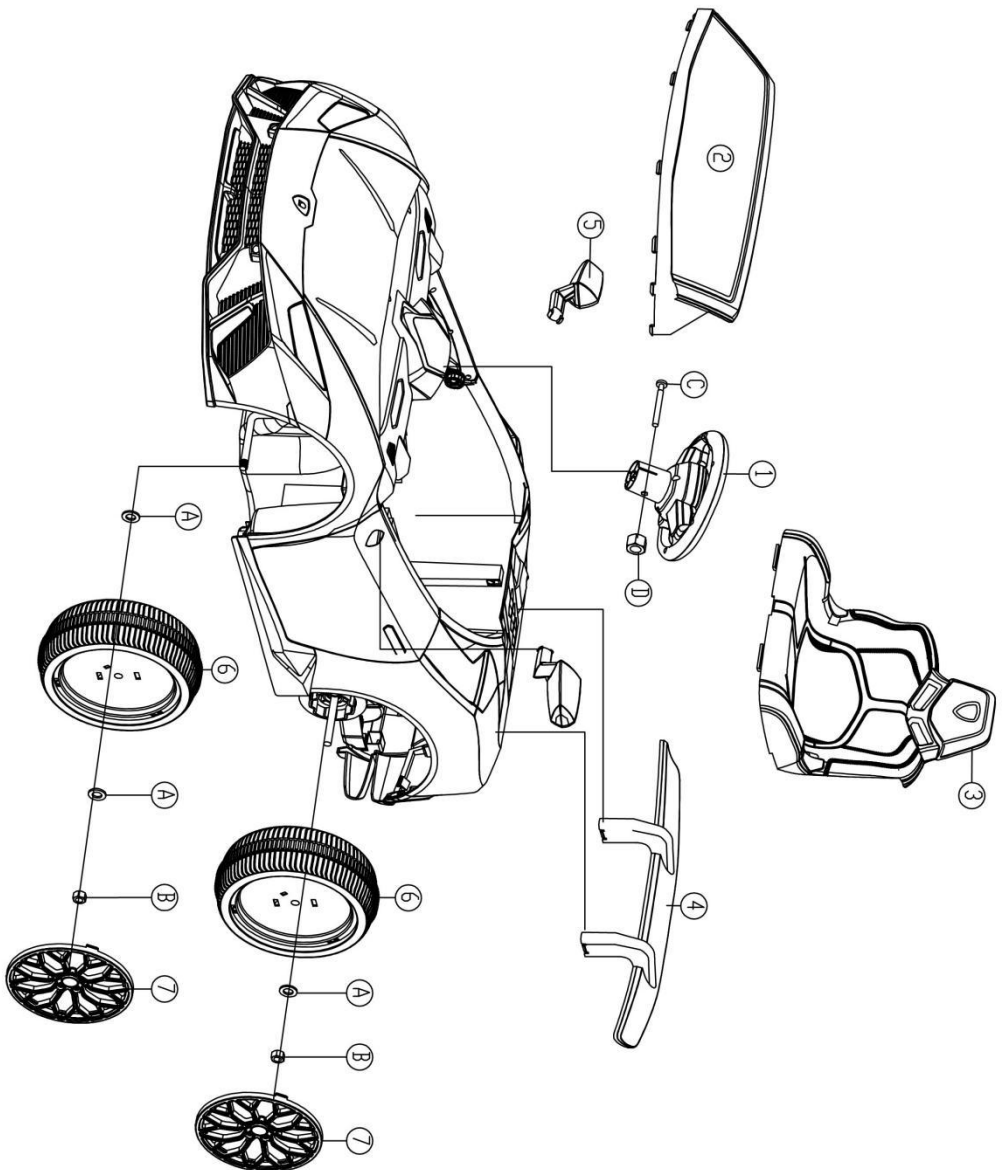

Safety 4



NEVER LEAVE CHILD UNATTENDED.

1. Never use in roadways
2. Never use near steep inclines or steps
3. Must use under adult supervision
4. Skill is required to avoid falls or collisions causing injury to the user or third parties.




WARNING!

- ADULT ASSEMBLY REQUIRED
- CHOKING HAZARD
- NOT suitable for children under 36 months

Rules for Safe Riding

- Use the toy only on flat surfaces. Such as inside your house, garden or playground.
- Keep children within Safe Riding Areas, Never use:
 - A. on lawn space, near steep inclines or steps, swimming pools or other bodies of water
 - B. in roadway near motor vehicles
 - C. barriers may cause strike
 - D. other unsafe areas
- Never use in the dark .A child could encounter unexpected obstacles and have an accident. Operate the vehicle only in the daytime or a well-lit area.。
- Never use outdoor on a rainy or snowy day
- Ensure your child is within the age range and weight limitation
- Ensure the safety of the toy before using
- Do not let any child touch the wheels or be near them when the car is moving.
- This vehicle has adjustable play seat belts. Please instruct children how to secure the seat belt before using ; guarantee the security.


Operation Instruction-front and rear wheel 5

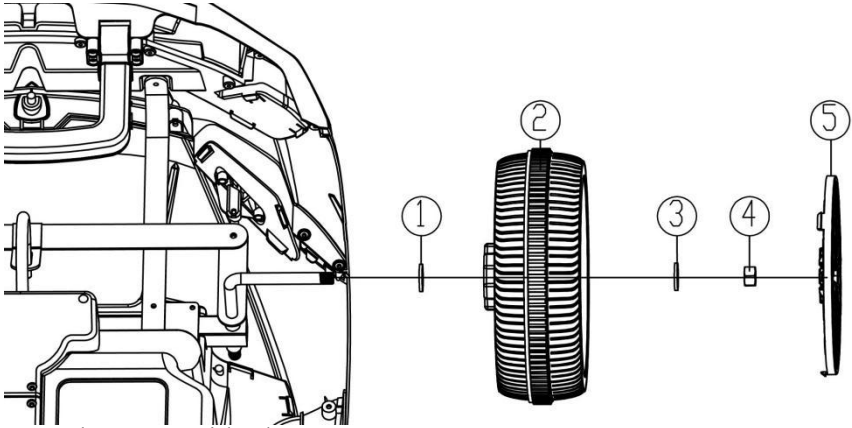

Turn the car upside down;


1. Put an $\varnothing 10$ gasket into the front axle
2. Install the front wheel;
3. Put another $\varnothing 10$ gasket;
4. Insert the M10 nut into the hole of the front axle and fix the front wheel.;
5. Install the wheel hub;

Use the same way to install the front wheel on the other side

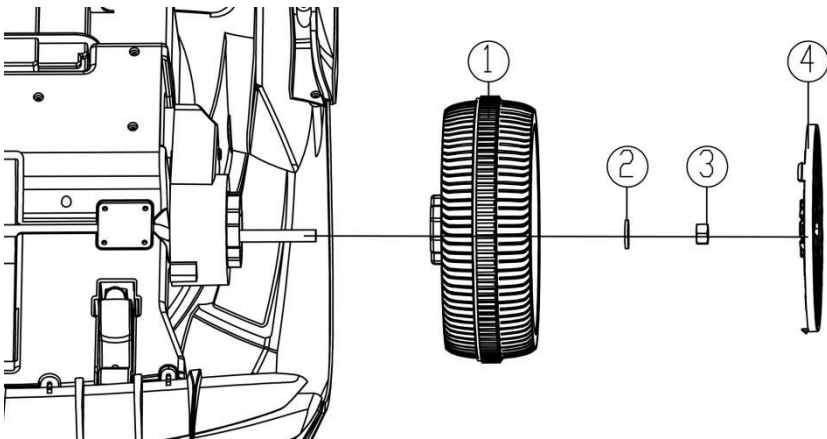


1. Put the wheel on rear axle
 2. Put an $\varnothing 10$ gasket on it
 3. Insert the M10 nut
 4. Install the wheel cap to the wheel
- Use the same way to install the wheel on the other side

Operation instruction 6

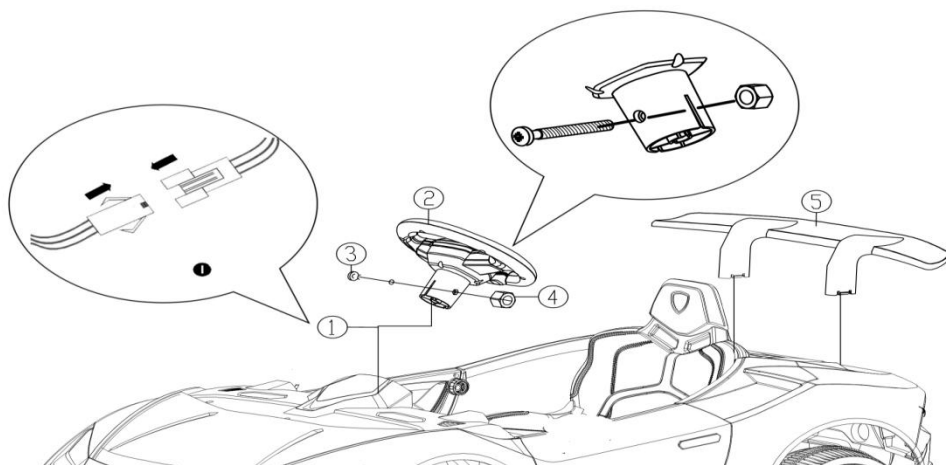


Turn the car back up

1. Connect the music plug-in on the steering wheel with the music plug-in beside the steering rod, and then place the plug-in into the hole under the steering rod of the dashboard;
2. Insert the steering wheel into the end of the steering rod;
3. Fix it with M5 screw ;
4. Put on the nut M5 in the other side;
5. Install the tailstock on the back of car body ;

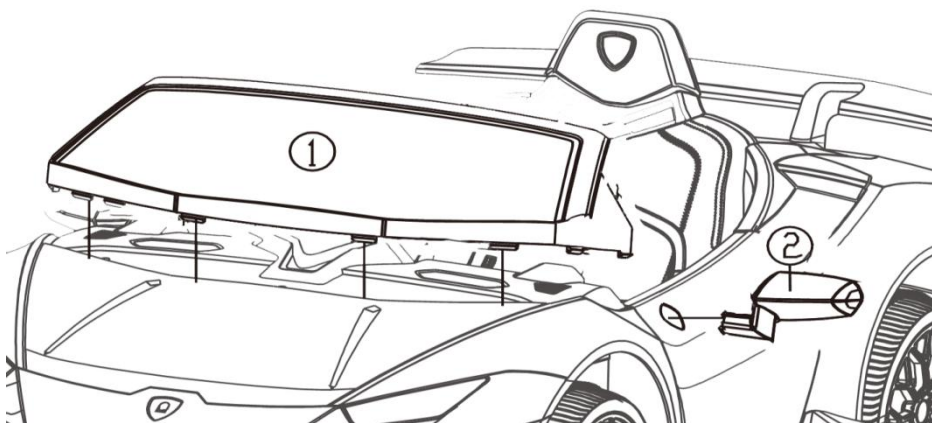


1. Place the windshield into the corresponding hole of the car body ;
2. Place the mirrors (left and right respectively) into the car door.

Operation Instruction 7

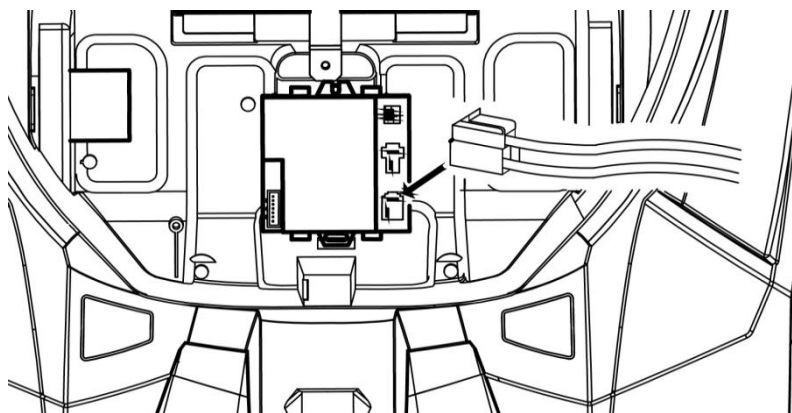


Find the main power line and insert the plug-in of the power line into the corresponding socket of the receiver.

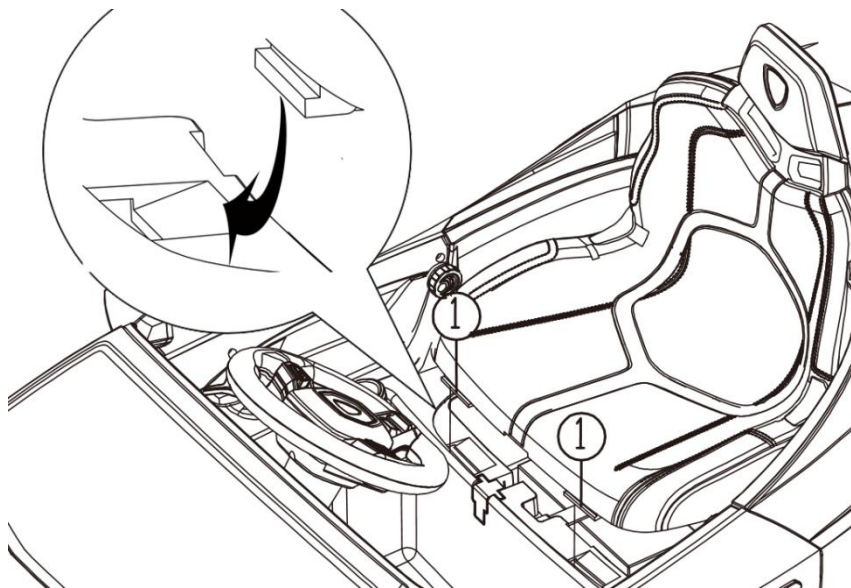


1. Fix the upper seat into the corresponding groove

;

Function Instruction 8

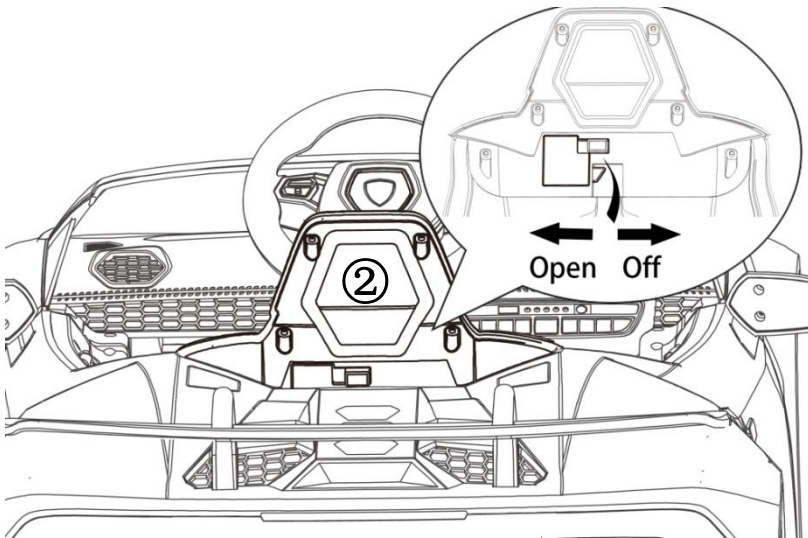


2. Press the seat button to fix it;

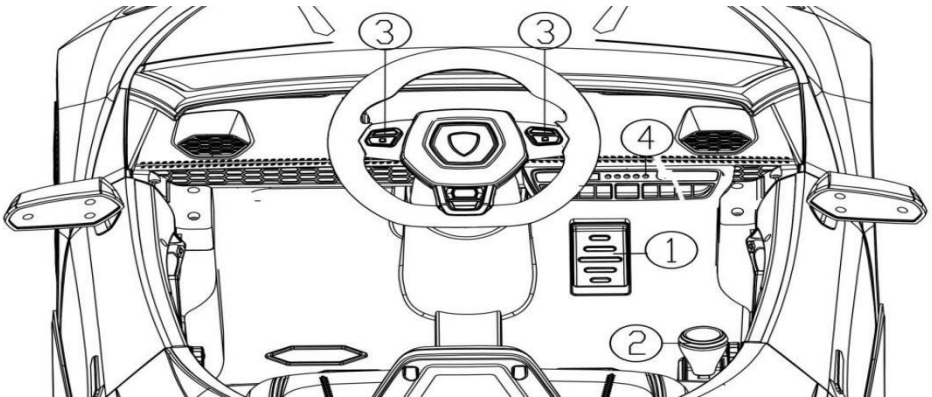

- 1) Foot pedal: press down the pedal, the vehicle moves; lift the foot to release the pedal, the vehicle will stop slowly;
- 2) Shift Switch: Change the direction of the car , Forward--Backward. The middle one can stop the car;
- 3) Horn sound button: Press it for horn sounds;
- 4) Control board

Function Instruction 9

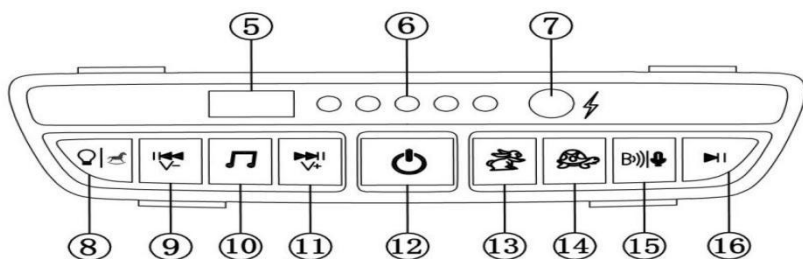


- 5) USB: connect your USB device
- 6) Power display: clearly see the battery power and help judge whether the battery needs to be charged;
- 7) Socket: charge
- 8) Light button/swing button: press it to switch the light/long press to swing;
- 9) Last song/volume-: press it to switch to the last song and long press can decrease volume;
- 10) Music Button: press it to play music;
- 11) Next song/volume+: press it to switch to the next song and long press can increase volume;
- 12) Power button: long press for 3 seconds can turn the vehicle on or off; short press for 1 second can stop the music;
- 13) High speed button: press it to change the car to the high-speed movement;
- 14) Low speed button: press it to change the car to the low-speed movement;
- 15) Bluetooth button: press it to dock with the mobile phone Bluetooth to play audio
- 16) Pause button: press it to pause music;



BATTERY WARNING!

- Non rechargeable batteries can not be charged.
- Only an adult can charge and recharge the battery.
- Different types of batteries can not be mixed.
- Battery need put in the right polarity.
- The exhausted battery should be removed from the toy.
- Power terminals must not be short circuited.
- Do not provide dry batteries.

Use the Remote Control 10

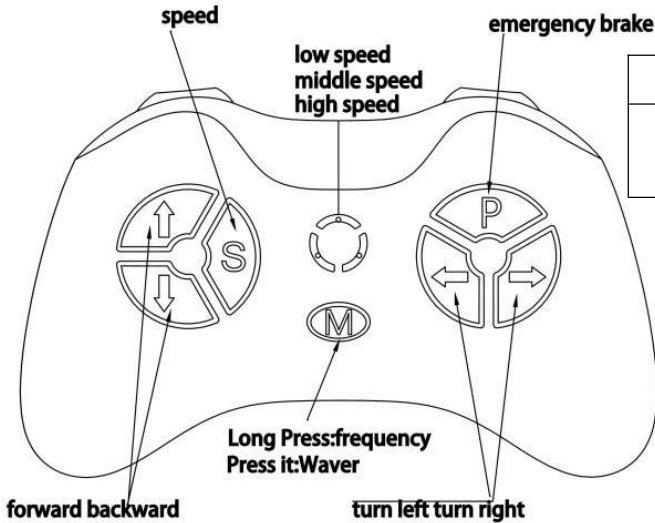

Warning

Only used by adults

Remote control first. When the remote control is on, foot pedal is not workable

Operation Manual:

Take out the remote control, Open the battery compartment on the back of the remote control and add two AAA LRO3 alkaline batteries. Pay attention to the polarity of the batteries. When the alignment light and speed indicator light up, it indicates that the battery installed is correct. This product does not provide dry batteries.

<Button Description >

(1) Long press on the frequency key(M) 2-4 seconds, Low speed LED light flashing. Turn on the power of the car, Low speed LED light keep flashing to solid light, then frequency pairing completed. If the frequency bind failed (Low speed LED light flashing) , remove the battery and repeat steps

P: Press to brake。

S: Speed: press to change speed(low,middle and high speed).

△Forward ▽backward。

◁ Turn left ▷ turn right

Use the Remote Control 11

- 2) Brake button: Press it to stop moving; press it again to move.
- 3) Speed selection key and speed indication: used to select speed of the car. Press the key once to switch the speed once. 3 speeds are cyclically switched, and the switching sequence is: low-medium-high. The speed indicator is arranged from top to bottom on the remote control: high-speed lamp, medium-speed lamp, low-speed lamp; when switching to one speed, the corresponding indicator lamp will light up. Note: The speed grade changes only when moving forward
- 4) Forward/backward keys: used for forward and backward movement control. When one of the keys is pressed, the moving speed will slowly increase to reach the set speed level. Therefore, children will not have a sudden impact.
- 5) Left turn/right turn key: used for left and right direction control.

Note: without operation after 10 seconds, indication light will turn off into power saving mode

APP Remote Control Instructions 12

APP Remote Control Instructions

1. Download:

Android phone: open WeChat to scan QR code ;


Iphone: search "Moqiqi" in APP store

2. Open the APP, turn on the Bluetooth of the phone and the power of the car.



3. Select the "  " icon on the APP homepage, jump to the Bluetooth connection interface, and select Bluetooth "YX-BLE", the icon "  ' turns blue to indicate a successful connection and return to the APP homepage.

4. Select "  ", jump to the following interface; then operate the car.

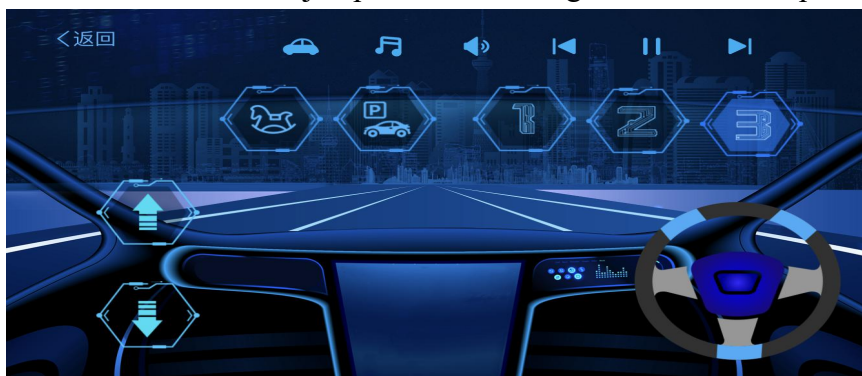


5..Connect the Bluetooth "YX" in the mobile phone Bluetooth system, click

the "  " icon in the APP to use this function.



Remote control icon function description

- | | | | |
|---|---|--|--|
| 1.  : Headlight | 5.  : pause | 9.  :first gear | 13.  : backward |
| 2.  :music | 6.  :next song | 10.  :second gear | 14.  :
Turn left/right |
| 3.  :horn | 7.  :swing | 11.  :third gear | |
| 4.  :last song | 8.  :brake | 12.  :forward | |

Charge 13

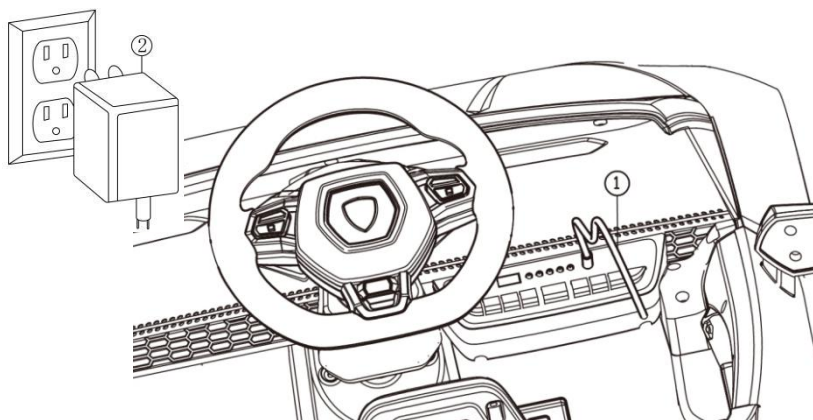


1. Insert the charger jack into the charging hole of the car
2. Plug the charger plug into the stable matching AC power supply as shown in the picture
3. **ATTENTION:** Only an adult can charge and recharge the battery!

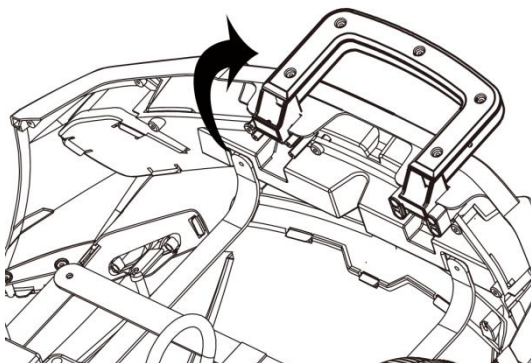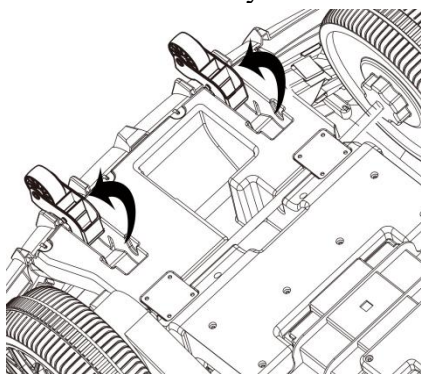

How to use the pull handle

1. Rotate the support wheels out.
2. Rotate the pull handle out.
3. You can move the vehicle by pulling.

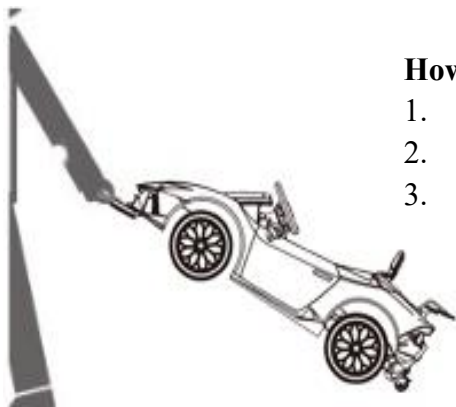

Charging 14

ONLY AN ADULT CAN CHARGE AND RECHARGE THE BATTERY!

This product has a charging protection function: when charging, all functions of the vehicle are not available!

WARNING!

● **PREVENT FIRE AND ELECTRIC SHOCK:**

- Use the only rechargeable battery and charger supplied with your vehicle. NEVER substitute the battery or charger with another brand. Using another battery or charger may cause a fire or explosion.
- Do not use the battery or charger for any other product. Overheating, fire or explosion could occur.
- NEVER modify the electric circuit system.. Tampering with the electric system may cause a shock, fire or explosion or may permanently damage the system.
- Do not allow direct contact between battery terminals. Fire or explosion can occur.
- Do not allow any type of liquid on the battery or its components.
- When charging the battery, it is strictly forbidden to smoke near the charged battery, and any flame or sparks are strictly prohibited to avoid accidents such as explosion.
- Explosive gasses are created during charging. Do not charge near or flammable materials. Charge the battery in a well-ventilated area ONLY.

- Do not open the battery and charger.
- Do not turn the battery upside down
- Please check whether the charger, battery and plug are damaged before charging. If any damage is found, stop using it until it is repaired before use.
- It is normal for the battery to generate heat during charging, but if the temperature is too high, you should check whether the charging current is too large or whether the battery is short-circuited.
- The battery must be fixed with a pressure plate. If the car is overturned, the battery may fall and hurt the child.
- If the product is stored or not used for a long time, it must be fully charged and charged once a month to ensure the battery life.
- Chargers and batteries are not toys and children are not allowed to play.
- When charging, the power switch must be turned off.
- It is recommended to charge 4-6 hours before the first use, but not more than 10 hours.
- When the speed of the vehicle obviously slows down during normal driving, it means that the battery power is insufficient. Please charge it in time.
- Please charge 8-12 hours after each use, but not more than 20 hours.

Battery Replacement 15

Protector

This product is equipped with self-reset protector, when overloaded or improper use, self-reset protector will automatically cut off the power supply for 15-20 seconds, and then restart. The self reset protector of the car is installed under the seat.

TO avoid losing power, follow these guidelines:

- Do not overload the vehicle, maximum 30KGS.
- Do not tow anything behind the Vehicle.
- Do not immerse water or other liquids in electrical components, such as wiring, batteries, etc
- Do not tamper with the electric system. replacement must be conducted by professionals or under the guidance of technicians.

BATTERY REPLACEMENT AND DISPOSAL

- Check the charger's wires, plugs, housing and other components before use. Stop using the charger when damage is found until it is repaired.
- After a period of time, lubricate the parts of the vehicle with a small amount of lubricating oil to prevent wear and rust.
- Vehicles should be placed far away from fire sources and avoid long-term illumination. Keep it flat and facing upwards, not upside down or tilted; in wet weather, parked indoors or covered with waterproof cloth.

Battery Replacement 16

- Vehicles should be placed far away from fire sources and avoid long-term illumination. Keep it flat and facing upwards, not upside down or tilted; in wet weather, parked indoors or covered with waterproof cloth.
- Vehicles should be kept away from hot objects such as stoves and heaters. Plastic parts may melt. When charging, keep away from inflammable materials to prevent fire.
- After use, please charge in time, charging must be adult operation. If you don't have to charge the battery for a long time, then charge it at least once a month to extend the battery life.
- Wipe the vehicle with dry soft cloth. Non-waxy furniture polishing material can also be used instead of soft cloth to wipe plastic parts to achieve surface finish effect. Do not use chemical solvents to wipe plastic parts of toys. Do not use soap and water to clean vehicles. Do not drive in rainy or snowy weather. Water can damage motors, electrical systems and batteries.
- When you stop using or placing the product, please cut off the power supply of the product and dial all switches to the stop or close position.
- Please do not use fuse that is not in conformity with the specifications of this product.

Do not alter the structure and circuit system of the product without authorization. Maintenance work must be carried out under the guidance of professional or technical personnel.

Troubleshooting Guide 17

Checkpoint		Elimination method
1.Is the fuse of the vehicle disconnected? 2.Does the foot switch contact well? 3.Is the welding line on the motor terminal good? 4.Is the connector of the motor lead properly connected? 5.Is it turning the Disconnect the plug-in of the motor and directly connect it to the battery?		Yes, cut off the power for 15-20 seconds and then restart No, next NO, fix the foot switch; Yes, next NO, Weld the terminal wire well; Yes, next No, Plug in plug-ins; Yes, next NO, Change motor; Yes, Driving circuit boards need professional maintenance, contact agents or distributors
1.Check whether the battery voltage is normal. 2.Will the motor (Gearbox) directly connect to the battery and speed up?		NO, charge; yes, next Yes, Drive circuit board failure, contact agent or dealer
1.Is the battery plug-in loose? 2.Does the charger feel any slight heat when charging?		Yes, Lock battery plug in; No, next No, Maybe the charger is broken. Replace the charger
Driving.no sound and light	1.Is the acousto-optic switch good? 2.Check whether the line and plug-ins from battery to vehicle are good.	No, change button; Yes, next No, plug in the plug-in and connect the broken line
Wheels do not move.	1.Is the drive rotating? 2.Check gear box, gear at all	Yes, Land the wheel; No, next Yes, Change a new gearbox

	levels are damaged.	
The vehicle is moving, it stops.	1. Does the rider weigh more than 35 kilograms? 2. Is it driving in rough terrain? 3. Check that the horizontal wheel can turn itself?	Yes, normal; No, next Yes, normal; The vehicle should run on the cement road No, next No, remove wheel and wheel fault
Remote control vehicles do not respond	1. Does the brake function start? 2. Is remote control electrified? 3. Is the receiver wiring harness loose?	Yes, Press the brake key to relieve the brake function; No, normal Yes, try again; No, Check whether the battery is out of power and whether the installation is in place. Yes, remove the row and reinstall; No, normal